

Mercedes E 250TD

ECU connector:

| | | | | | | | | | | | | | | | | | | |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 |
| 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | |
| 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | |

Connections:

| ECU pin no. | Function | Wire color in box harness |
|-------------|-------------------|---------------------------|
| 55 | Power +12V | Red |
| 4 | Ground | Black |
| 9 | Signal 1 | Yellow |
| 46 | Signal 2 | Blue |
| 22 | MAP sensor signal | White |