


VW Phaeton 5.0TDI V10 313HP

1. Box type: 2x VT101303.
2. Find both plugs for injector harness. Disconnect them and connect boxes adapter between.

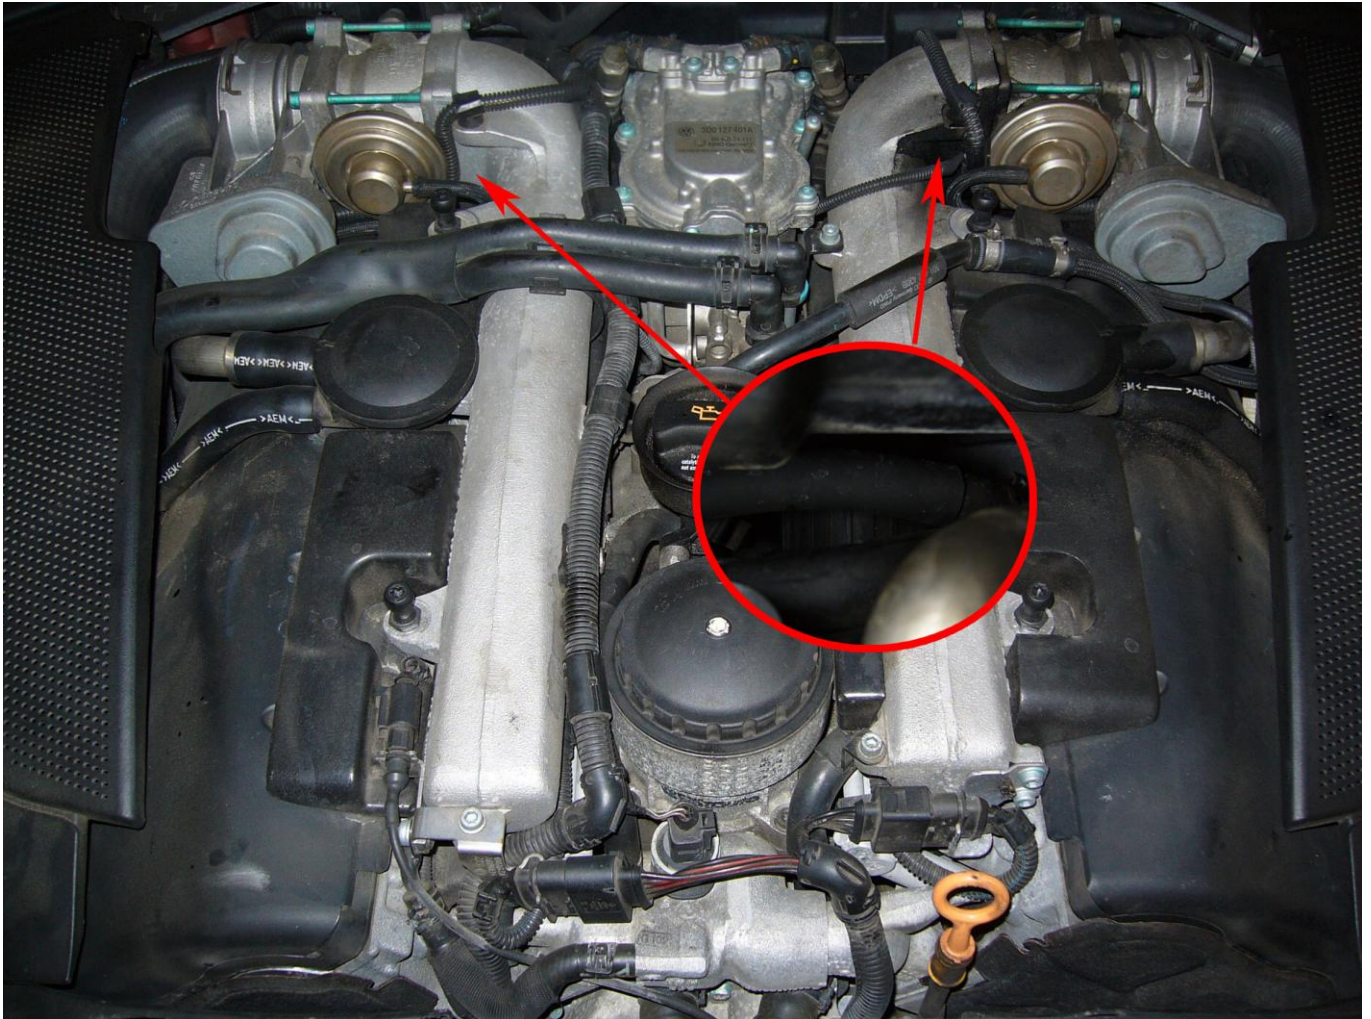

3. Connect black (-) and red (+) wires from both to battery.