


VW Passat 1.9TDI 101HP 2004

1. Find plug for injector harness. Disconnect it and connect box adapter between.

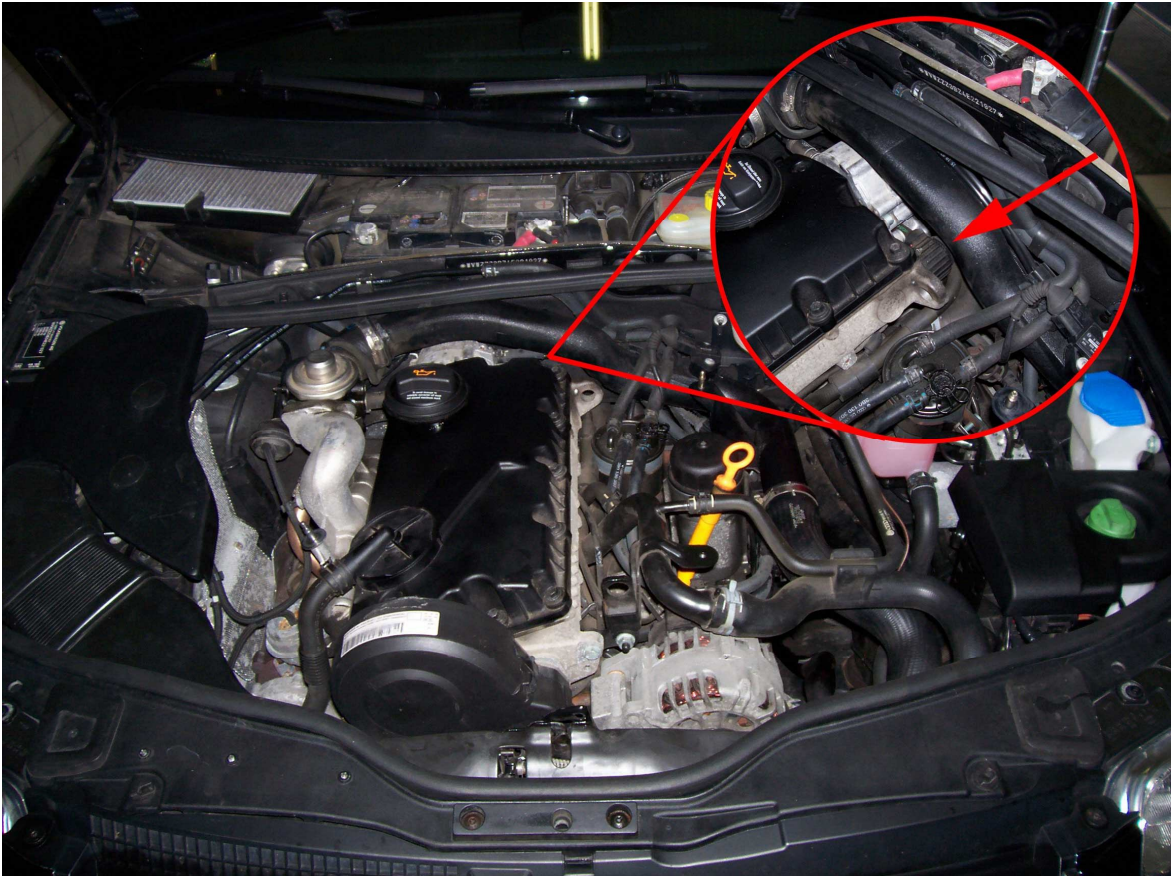

2. Connect black and red wires to battery.

